

Proper Use And Care Of The Clip And Clip Holder

Figure 1: Shows TheClubPin with Velcro strip attached for storing in your bag.

Figure 2: Figure 3: Figure 4: **Fig 2:** Shows Carabiner, **Fig 3:** Clip the Carabiner anywhere on bag, usually around where your towel or other accessories hang, then clip TheClubPin on Carabiner, **Fig 4:** Shows TheClubPin on the included bag clip .

Figure 5: Shows proper placement of TheClubPin on club (**Close to the hosel**). Same placement works on Hybrids, Irons, and Blade Putters.

Figure 6: Shows proper placement of TheClubPin on bent shaft mallet putter. Notice it's a little higher on shaft above bend. This is proper placement on any bent shaft putter.


Figure 7: Shows how to place or rest another club on the one with the TheClubPin. You could also just lay the other club across the face of the club that has the TheClubPin as in **Figure 8**.

Figure 8: Shows how to place extra club on TheClubPin instead of leaning against the other.

Figure 9: Shows Blade Putter standing up with TheClubPin attached.

Figure 10: Shows flat part of my lawn with TheClubPin standing up club in my grass that is 3.5 to 4 inches long. So high rough is no problem. **Grip should always be facing toward the wind direction if windy.**

Figure 11: Shows 30-to-45-degree part of my lawn with TheClubPin holding club upright with no problem. Notice grip is facing uphill. **Grip should always be facing toward the wind direction if windy.**

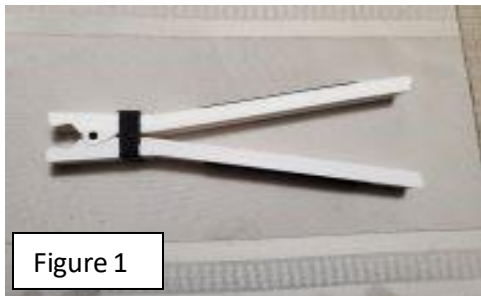

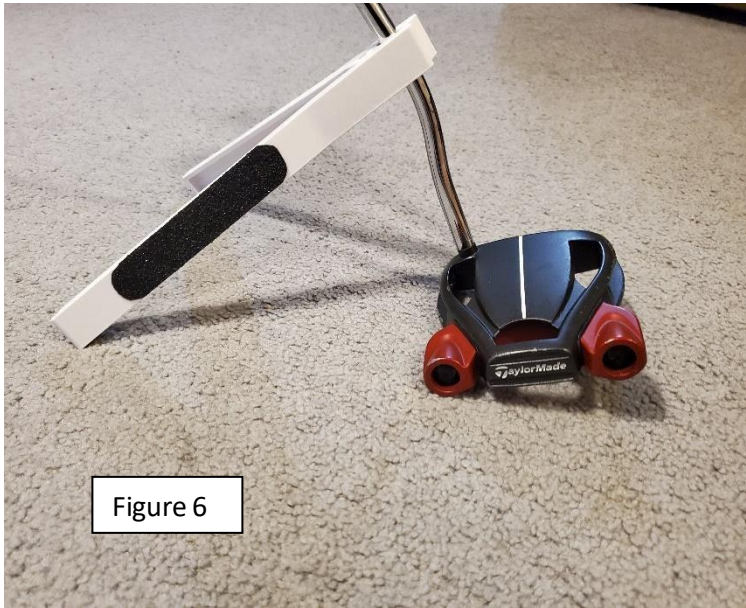


Figure 6



Figure 7



Figure 8



Figure 9



Figure 10



Figure 11